

EXTERIOR COATINGS MANUAL

Congratulations on choosing one of the GYEON high quality coatings. With this user manual we would like to share with you basic tips on surface preparation and application to ensure your complete safety during application and satisfaction with the end result.

SURFACE PREPARATION:

Proper surface preparation is crucial for the bonding and durability of the installed coating. Always mind these simple rules:

- the surface should be decontaminated and free of any residue;
- old waxes, glazes or coatings should be stripped before proceeding

TECH-FACTS AND APPLICATION TIPS:

Never work in direct sunlight.
Ensure the area you work is well ventilated.
Ensure the car stays in stable conditions without the risk of rainfall or rapid humidity changes after the coating application.
Always respect individual product application instructions.
The coating is fully dry after 12 hours.
Only after that time the car can be driven.

OUTDOOR APPLICATION:

All GYEON EVO coatings can be applied outdoors. Make sure to respect the following guidelines:

- Recommended application temperature is between 15° and 25°C (59° to 77°F).
- Do not apply in direct sunlight.
- Do not apply when high risk of rain for the next 24h.

PRECAUTIONS:

- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.


Q² TRIM EVO




Clean the surface with Q²M TrimCleaner.



Ensure the surface is oil-free and completely dry. Use Q²M PREP before applying the coating.

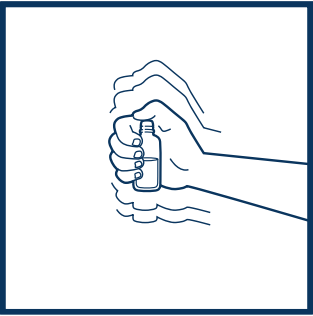

Shake the bottle of Q² TRIM EVO before use.

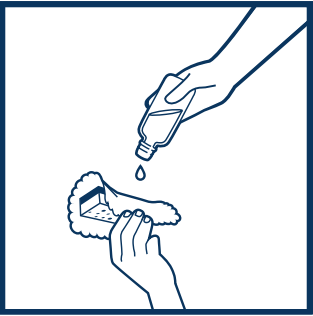

Apply a thick layer with the attached applicator.




Wipe Q² TRIM EVO onto the surface in a criss-cross pattern. Ensure a thick layer has built up.



Wipe off if necessary shortly after application. Wipe off depends on climate (ask your supplier for advice).


Q² RIM EVO

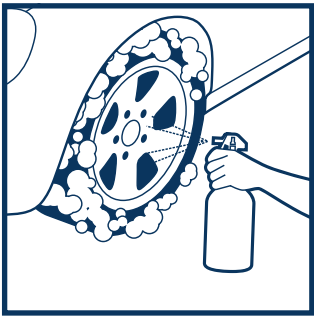


Clean the rim with Q²M IRON WHEELCLEANER and Q²M TAR. You can remove additional impurities with Q²M CLAY EVO if they are visible.



Use Q²M PREP before applying the coating (isopropyl alcohol does not fully degrease the surface).

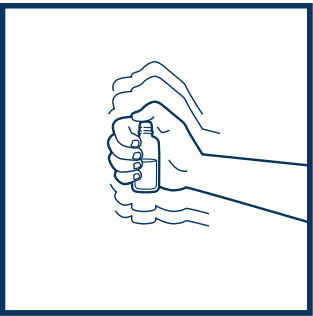

Shake the Q² RIM EVO bottle well before use.

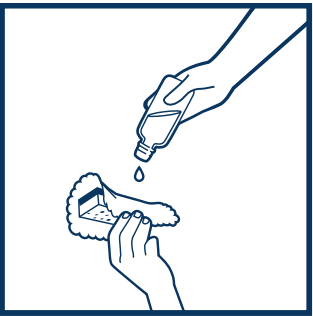

Apply a thick layer with the attached applicator.




Wipe off immediately after application (ask your supplier for advice). Split complex-shaped rims in sections.

Q² VIEW EVO


Q²M GLASSPOLISH



Clean the window with Q²M GLASS.

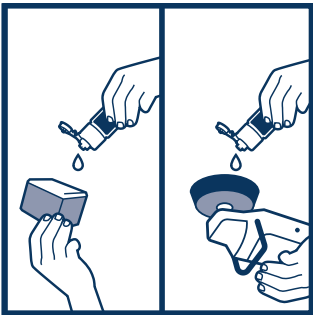


Apply Q²M GlassPolish on the included applicator or use via polishing machine using with Q²M Polish Pad. Work on small area till a light residue will be left.

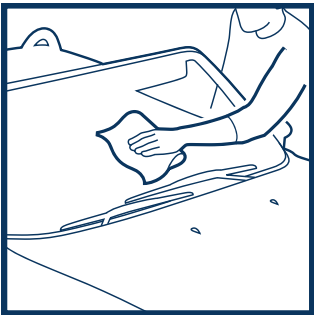


Wipe the residue of the product with a clean, damp cloth. Wait until the surface dries out completely and apply Q² REPEL EVO.


Q² REPEL EVO

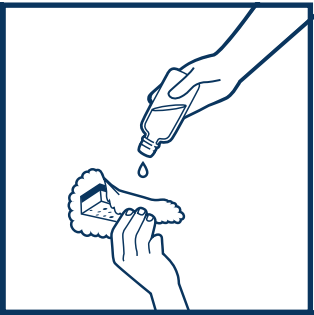


Always use Q²M GLASSPOLISH to prepare the surface. Apply Q² REPEL EVO in circular motion generously in small section. Leave it to dry for 15min and apply a 2nd layer without wiping off the 1st layer. We recommend to use the whole 20 ml bottle for a windshield and 2 side windows.

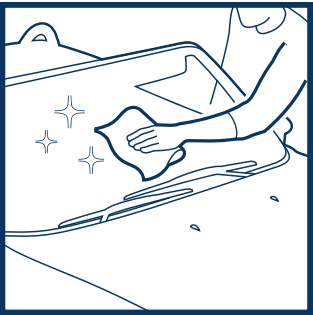


After 15min remove the residue with a damp Q²M BALDWIPE EVO. Repeat if necessary.

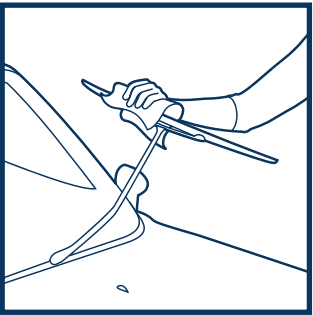


For maximum durability apply a small amount of the product onto your wiper blades or replace them with new ones. Avoid any water for at least a few hours.

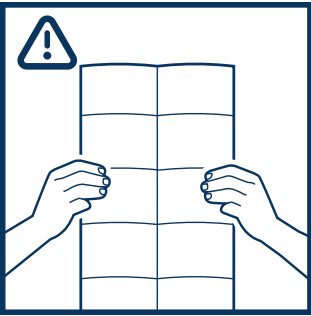


Read carefully all information in this manual, including the Tips&Tricks and Precautions sections.

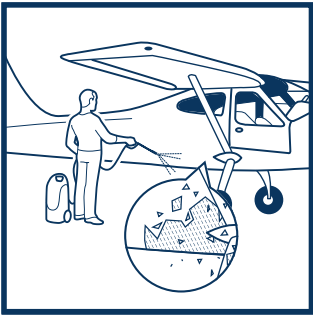

Wash the plane using Q²M FOAM and a strong degreasing agent.

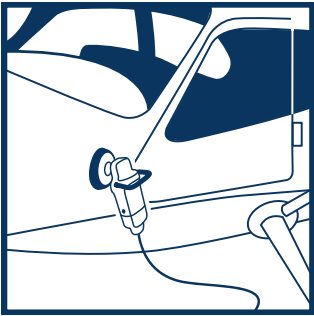


Ensure the surface is contaminants free. We recommend at least one step of paint correction to improve gloss and remove defects.

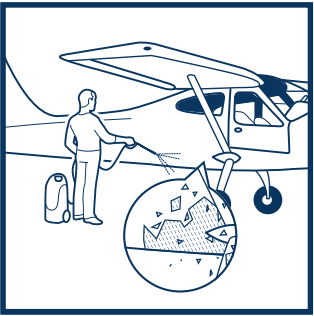

Always wash the plane with a highly degreasing agent after paint correction. Hot water and the use of a dish washing liquid are recommended.



Ensure the surface is oil-free and completely dry. Use of Q²M PREP is obligatory.

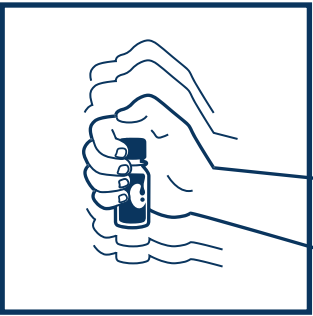

Shake the Q² AERO bottle before use.



Use a generous amount of product on the Q²M COATING APPLICATOR. Ensure the surface is cool and completely dust free.



Apply a thick layer of Q² AERO. Level the coating well. Apply in your preferred motion. Levelling is crucial, not the application pattern. We recommend applying full panels. Split panels only while applying at high temperature or humidity.



Wipe off immediately (10 ~ 30 seconds) after applying to the whole panel/section. Inspect each panel for high spots immediately.

NOTES

Let the coating dry for 12h before using the aircraft.
Ensure the aircraft is stored in a dry place and will not be exposed to rain.
After this period, the plane can be used in all conditions.
Do not wash the aircraft with any strong detergents within the first 14 days.